
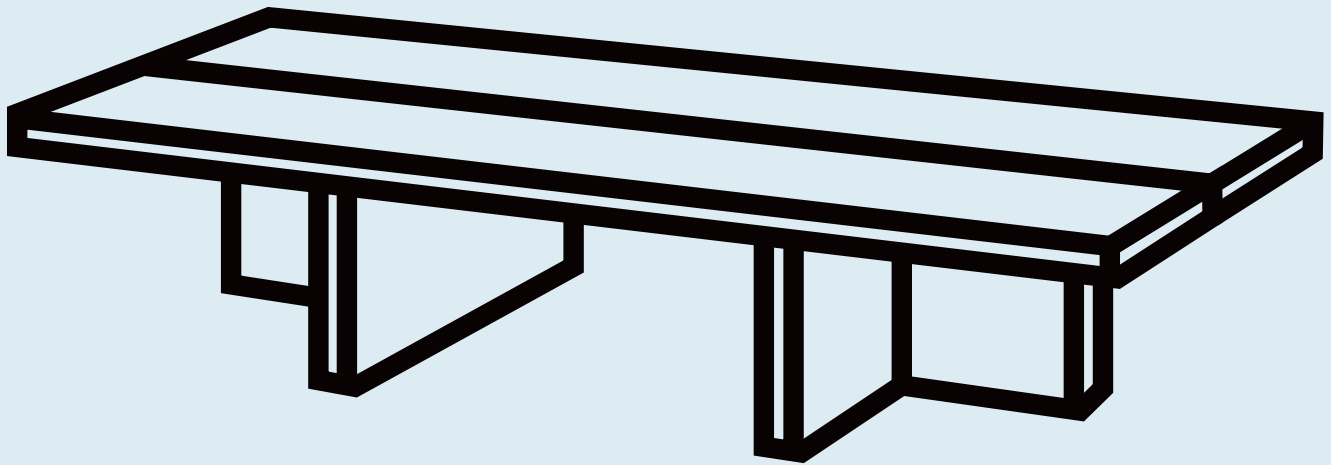


NowThen Outdoor Coffee Table

DESIGNED IN 2021

ASSEMBLY NOTES | REV 02

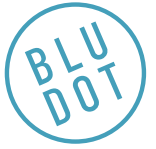

 
 
 
 
NEED A HAND?




Contact us at service@bludot.com or
844.425.8368 for assistance.




@BLUDOT

We design all our pieces in our Minneapolis studio. Follow
along on Instagram for some sneak peeks into the process.

Parts & Hardware

			
QTY 16	QTY 4	QTY 20	QTY 20
Pt. 1613	Pt. 1081	Pt. 3001	Pt. 3002

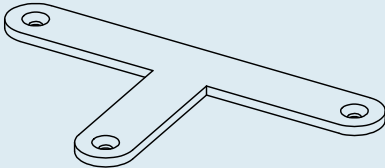		
QTY 6	QTY 1	QTY 2
Pt. 1229	Pt. 9035	Bottom Bracket

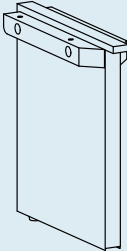
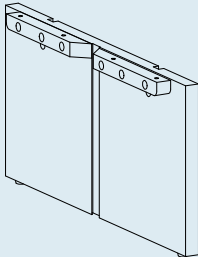
 
		
QTY 2	QTY 2	QTY 2
Short Leg	Long Leg	Top Panel

Step 01


ATTACH THE SHORT LEGS.

Position the top panels on a soft surface to prevent damaging the wood.


Use the provided hardware to fix the two top panels together by attaching the short legs as shown. Do not fully tighten the bolts.

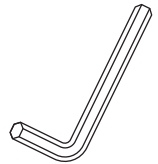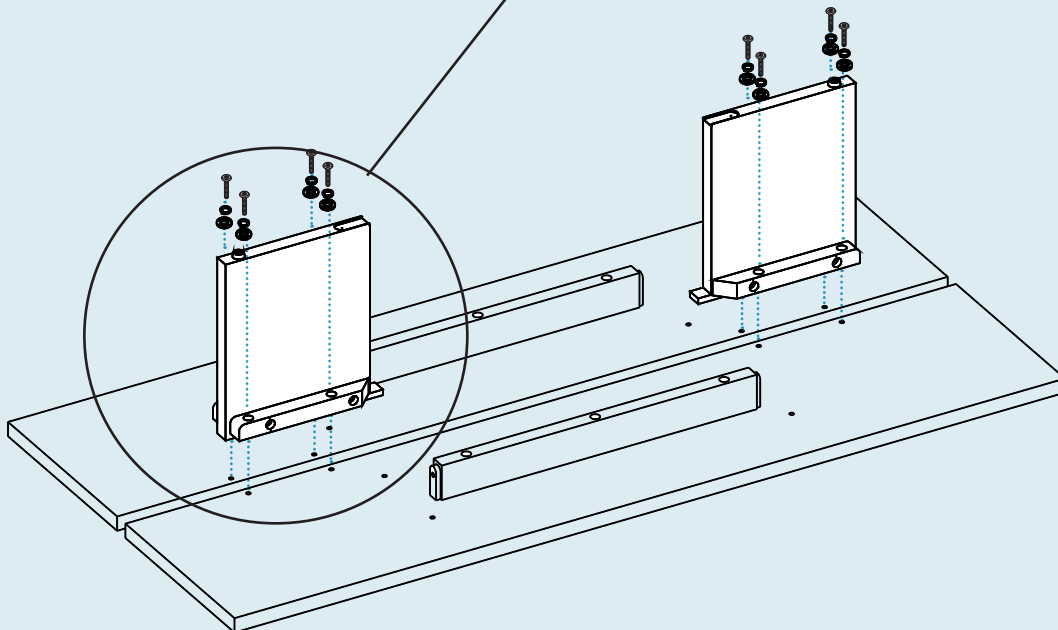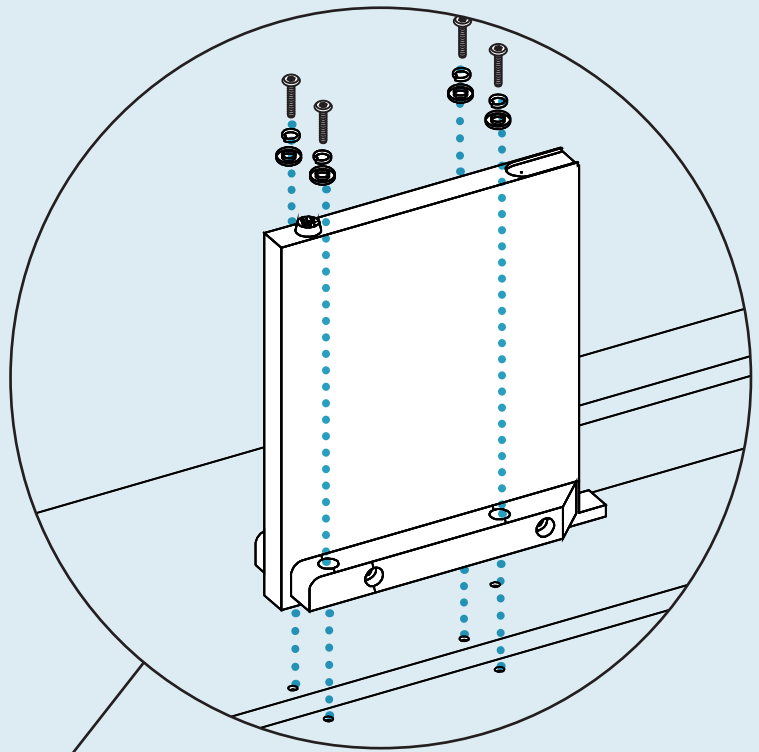


PT. 9035 X 1

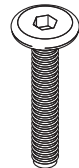

PT. 1613 X 8

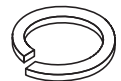

PT. 3001 X 8


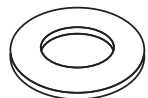


PT. 3002 X 8

Step 02

ATTACH THE LONG LEGS.

Attach the long legs using the provided hardware as shown. Do not tighten the bolts.

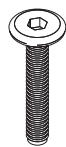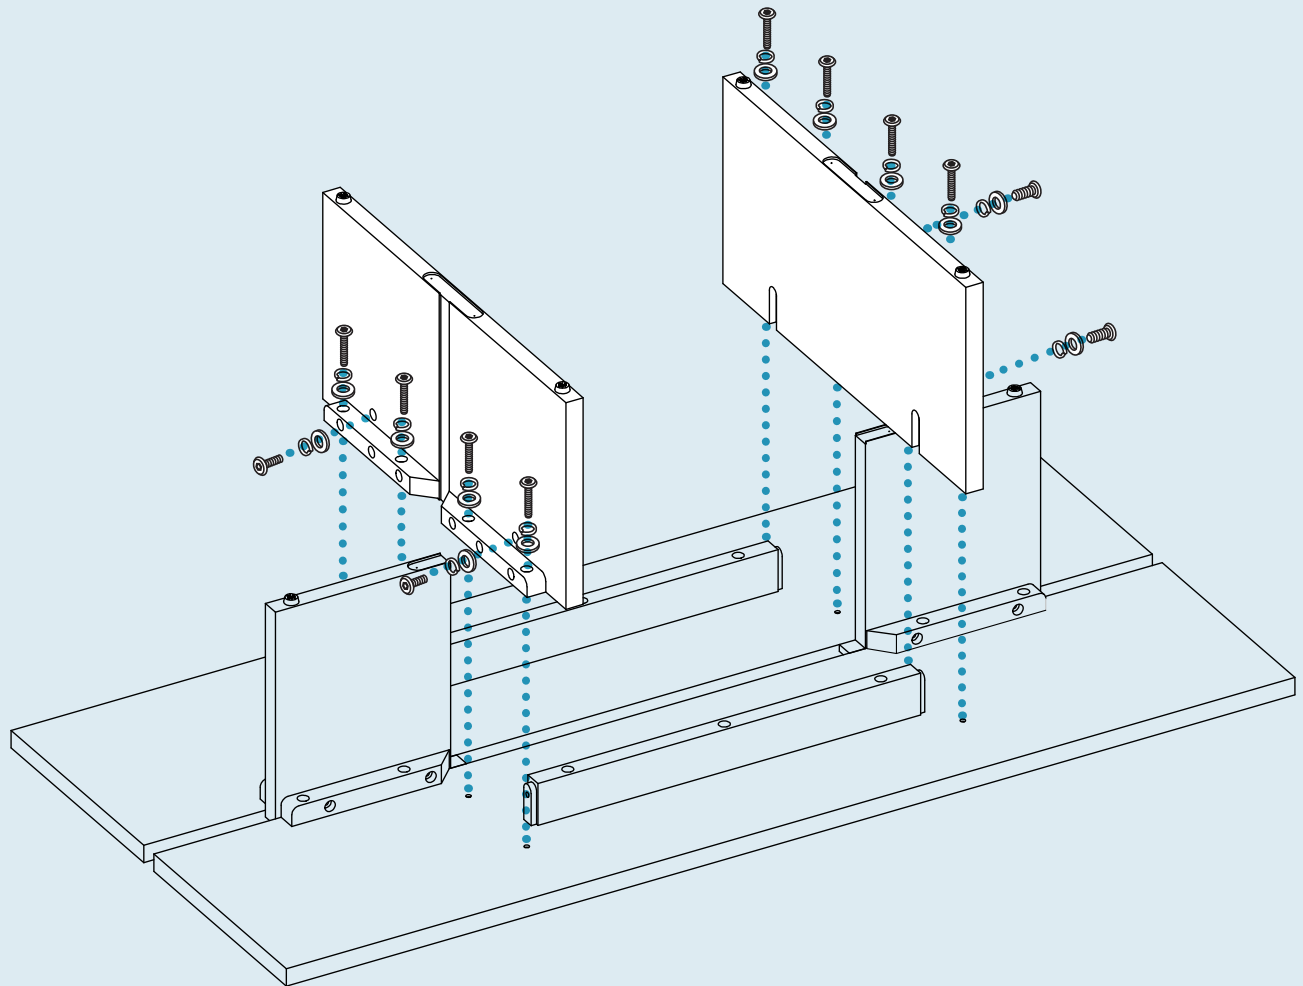

PT. 1613 x 8




PT. 1081 x 4



PT. 3001 x 12



PT. 3002 x 12

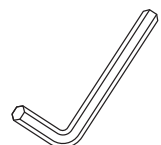


PT. 9035 x 1

Step 03

ATTACH BOTTOM PLATE.

Attach the two bottom plates using a phillips screw driver and the provided hardware. Tighten all of the hardware from the previous steps.

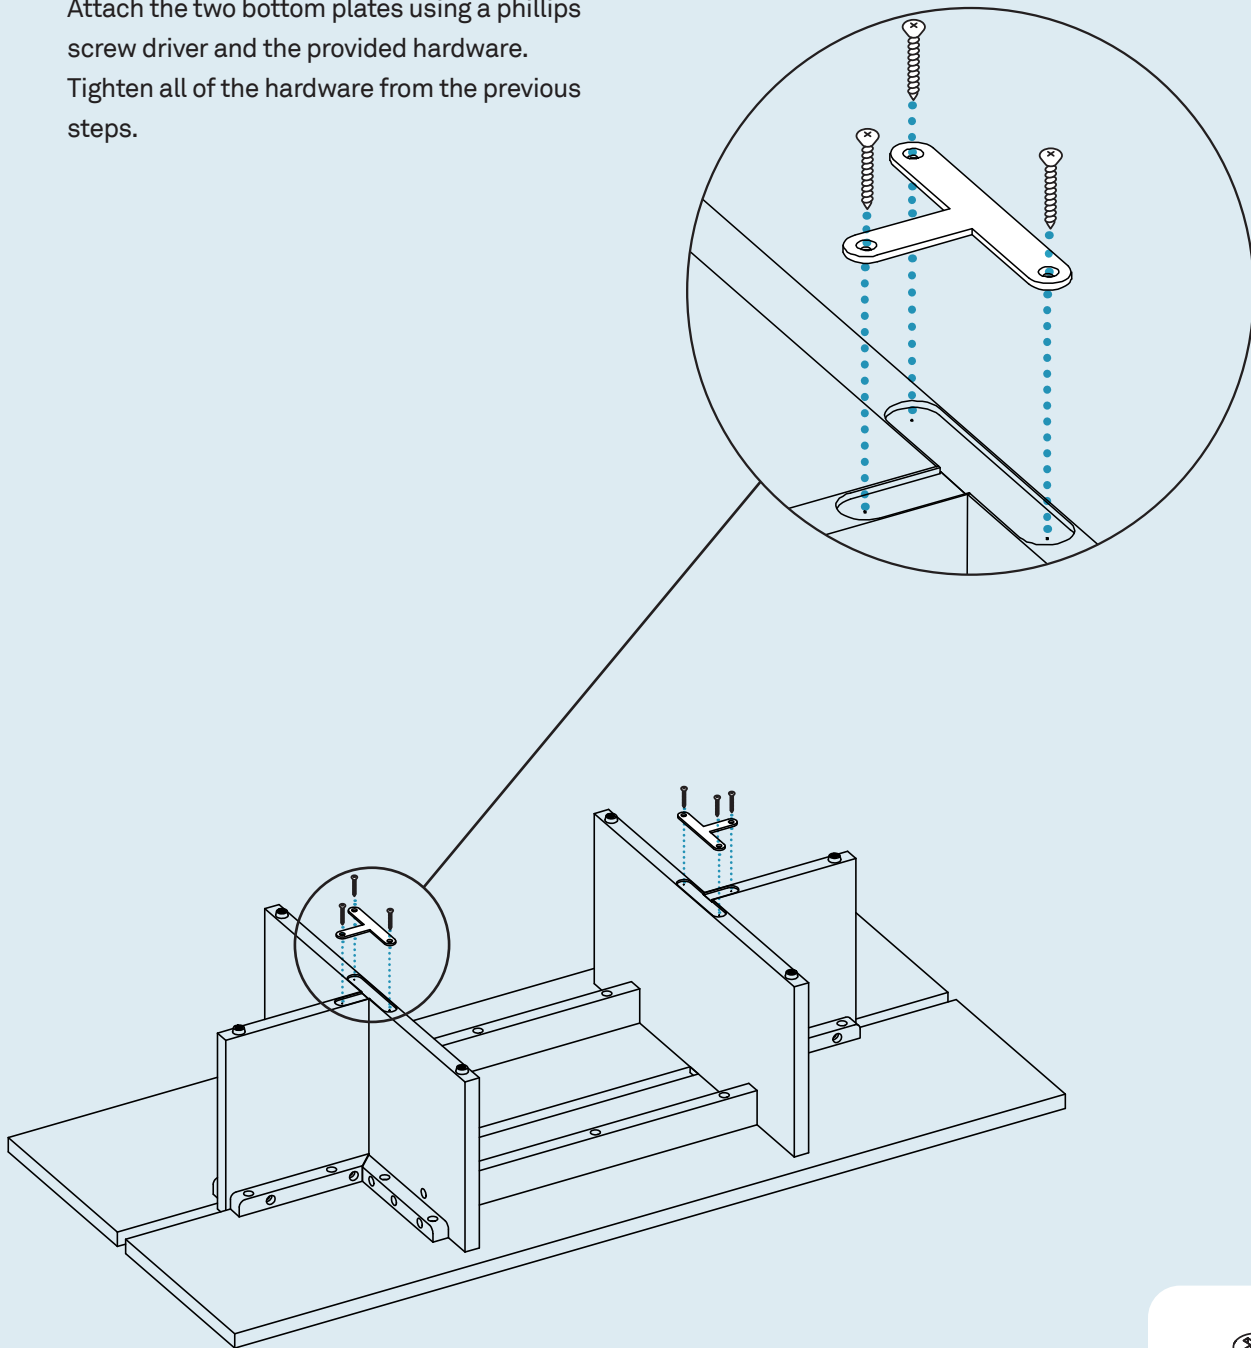



PT. 1229 X 6

Step 04

LEVEL THE TABLE.

 If the table is unsteady, twist the adjustable glides on the bottom to level.

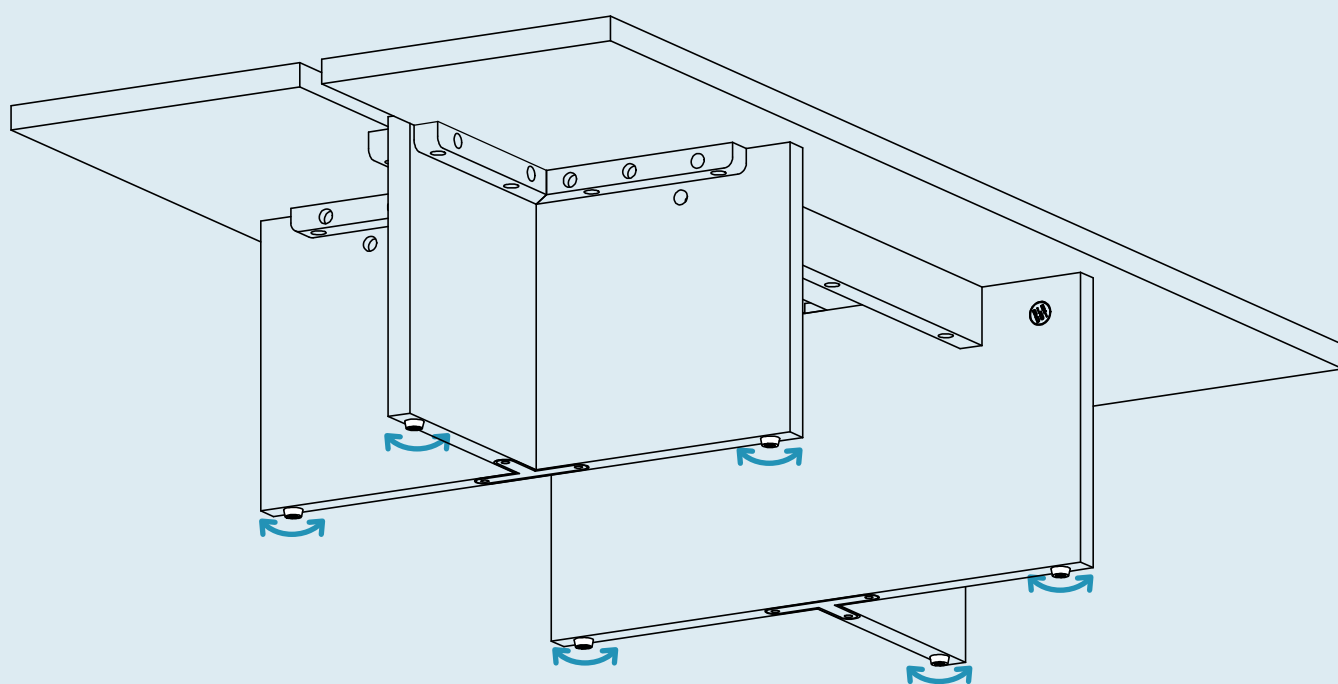



Additional Information

Our teak is sustainably sourced Grade A solid wood. Teak's natural characteristics make it highly suitable for outdoor use. Keep in mind, graining and color may differ between pieces due to natural variations in the wood. Teak also weathers to a silver-gray patina over time. How much and how quickly it changes depends on climate, exposure to elements and level of care. Temperature changes cause teak to naturally expand and contract, sometimes resulting in hairline cracks. This should not affect the structural integrity of the design.

CARING FOR TEAK

Teak's natural oils make it ideal for outdoors-preventing rot and making it resistant to fungus and woodboring insects. Avoid letting water stand on surfaces. This can cause teak's natural oils to surface and appear as water stains. Over time, exposure to moisture can also raise the wood grain. Simply sand with fine sandpaper to smooth it out.

To keep your teak looking extra pretty, we recommend covering it when not in use. If you prefer your teak less silver-gray, we suggest using Bayes Teak Cleaner and Restorer to help maintain its original color or bring some of it back if already weathered. Apply according to the manufacturers' instructions for best results.

For best results, we recommend the following care: Wipe spills with a clean dry cloth, cover furniture in the off-season, and store indoors during winter months.

