
Hitch Add-On Kit

DESIGNED IN 2013

ASSEMBLY NOTES | REV 02

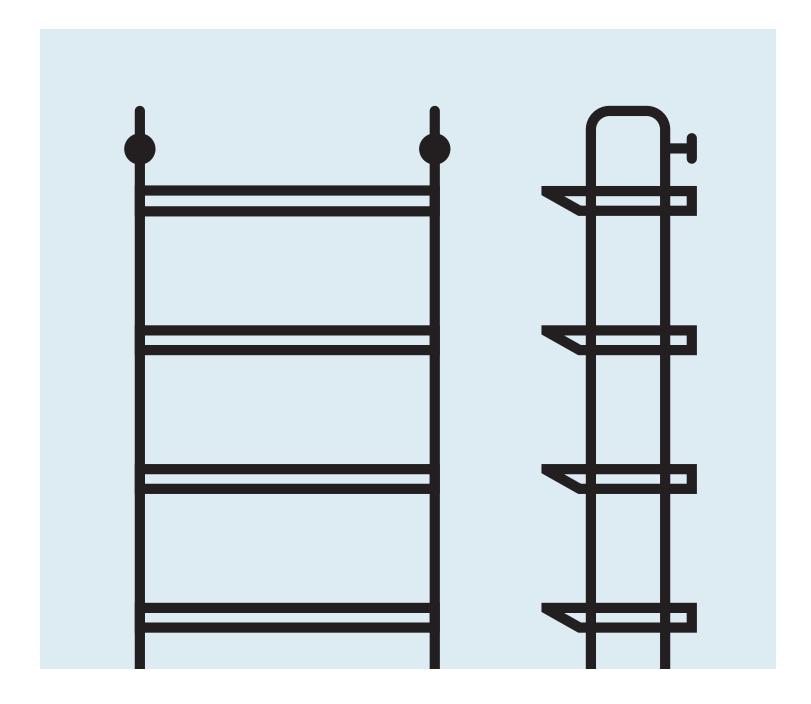




ABOUT TIME YOUR WALLS GOT HITCHED.

NEED A HAND?

Powder coated uprights and wood shelves make you the master of your own book case destiny. Single units stand alone. Gang up multiples to create mass appeal.

Contact us at **service@bludot.com** or **844.425.8368** for assistance.

Parts & Hardware

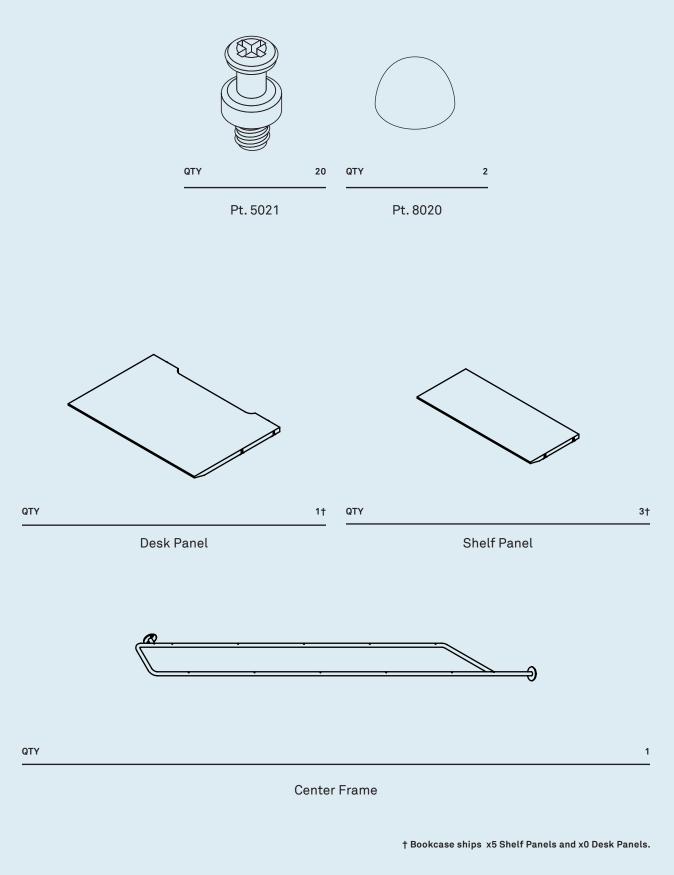


Step 01

ASSEMBLING THE CENTER FRAME.

Using a phillips head screwdriver, attach hardware to the center frame as shown.

NOTE: The add-on kit comes with a middle leg and utilizes the hitch leaning starter kit legs. If previous hitch starter kit is assembled, please disassemble before continuing to the next step.

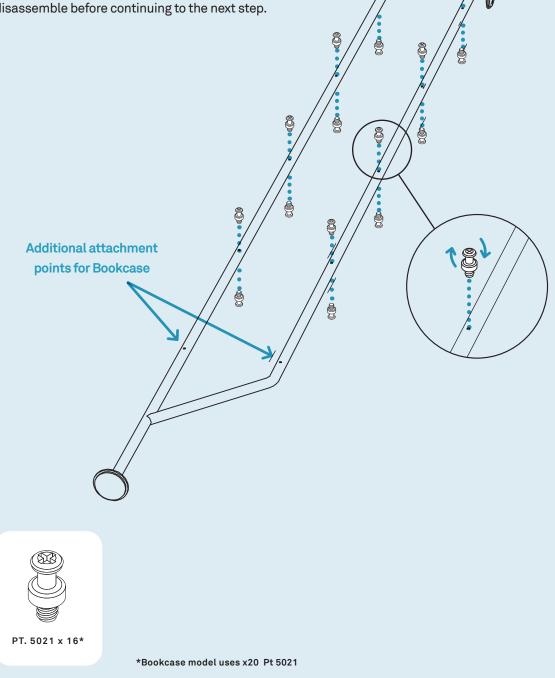


Step 02

ATTCHING TO A WALL.

Space the frames as shown below. Use a pencil and the pre-attached brackets to mark the attachment hardware locations. Use the hardware best suited to your particular wall to secure the product.


NOTE: Wall attachment hardware is not provided. We recommend consulting your local hardware professional for the attachment hardware best suited to your particular wall.

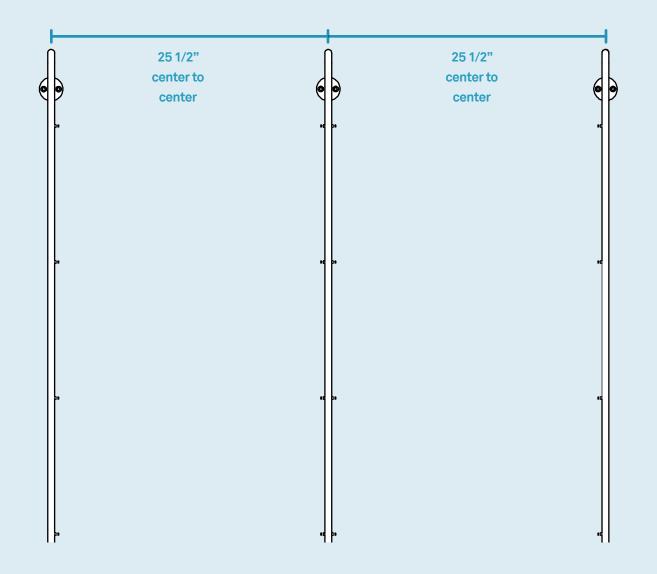

Step 03

ATTACHING THE SHELVES.

Attach Pt 8020 to the back face of the lowest shelf as shown. Align the pre-attached shelf hardware with PT. 5021. Slide down shelves and tighten the shelf hardware as shown. Repeat for the remaining shelves.

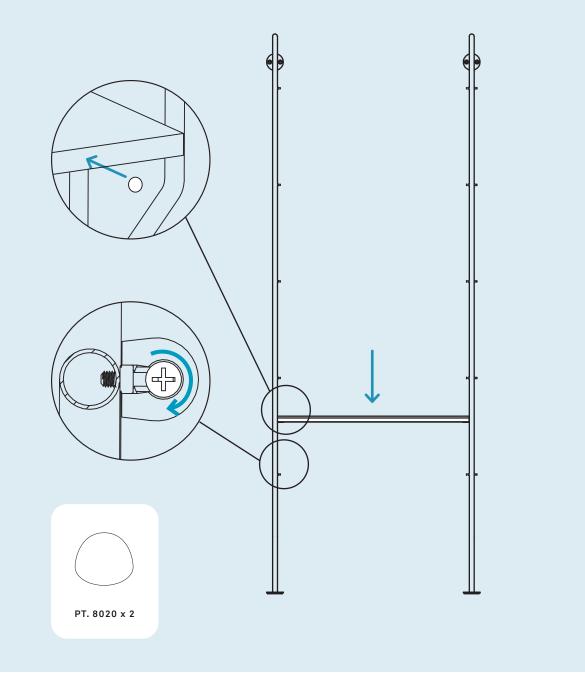


ASSEMBLY NOTES

Attach Desk Brackets

Note: This additional step only applies to models that come with a desk panel. Complete shelf assembly as shown in the assembly instructions booklet before proceeding.

Attach the Desk Brackets to the bottom of the desk panel using the provided hardware as shown.

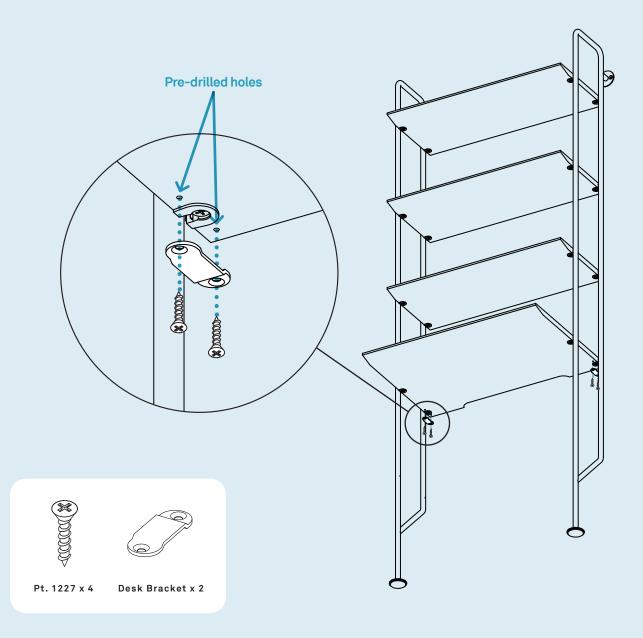

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulate for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

