
Peek Collection

DESIGNED IN 2016

ASSEMBLY NOTES | REV 00



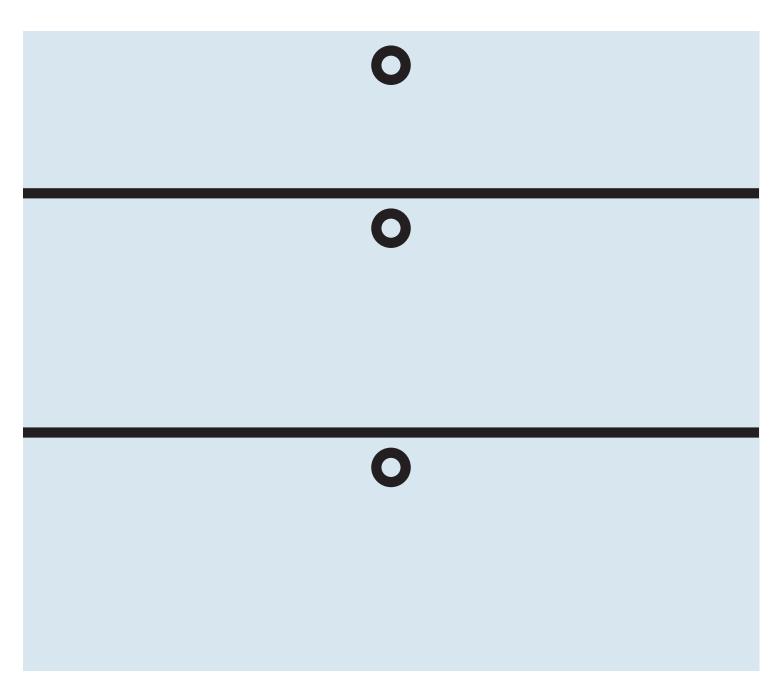


THE HOLE SHEBANG.

What is missing makes the mojo in this new wood case good collection. A round cut out in drawer and door front acts as the pull, creating function and visual appeal.


NEED A HAND?


Contact us at **service@bludot.com** or **844.425.8368** for assistance.

Parts & Hardware

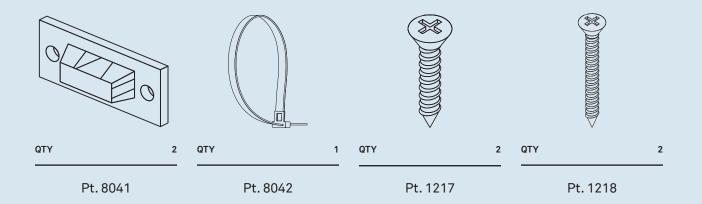



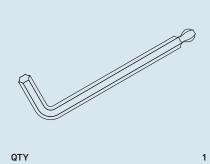

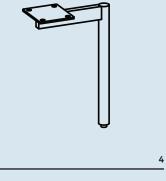

Pt. 1616


16

QTY

Pt. 9021




QTY

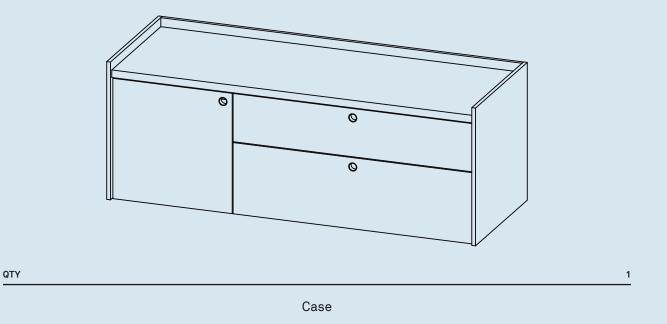

Step 01

ATTACH THE LEGS.


After the legs have been attached, have a second person help lift and bring the case upright in order to prevent leg damage.

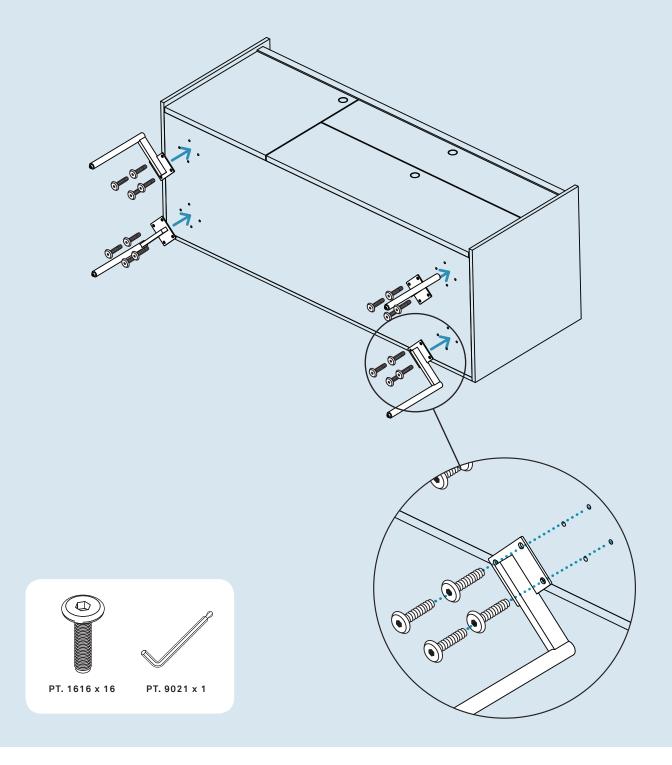

Step 02

ATTACH ANTI-TIP BRACKET TO THE WALL.

Install anti-tip bracket to wall stud 1-inch below case top panel height.

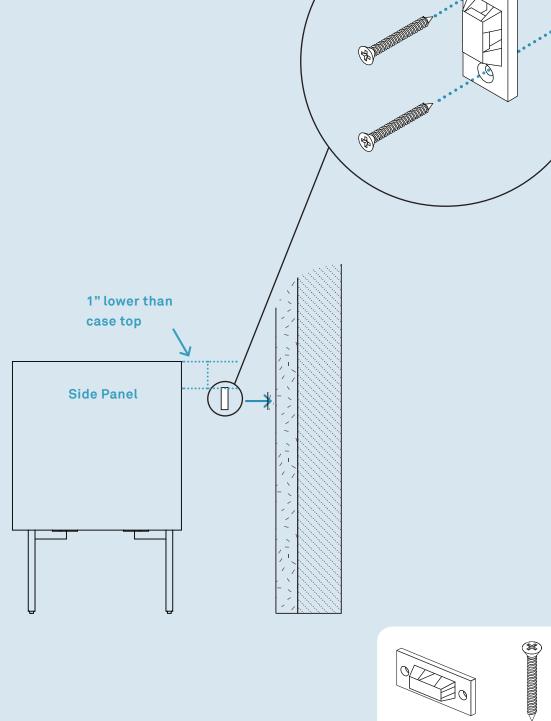


Wall

Ò.

Step 03

INSTALL ANTI-TIP BRACKET TO CASE.


In order to prevent damage, it is recommended that 3/32" pilot holes be drilled prior to installation.

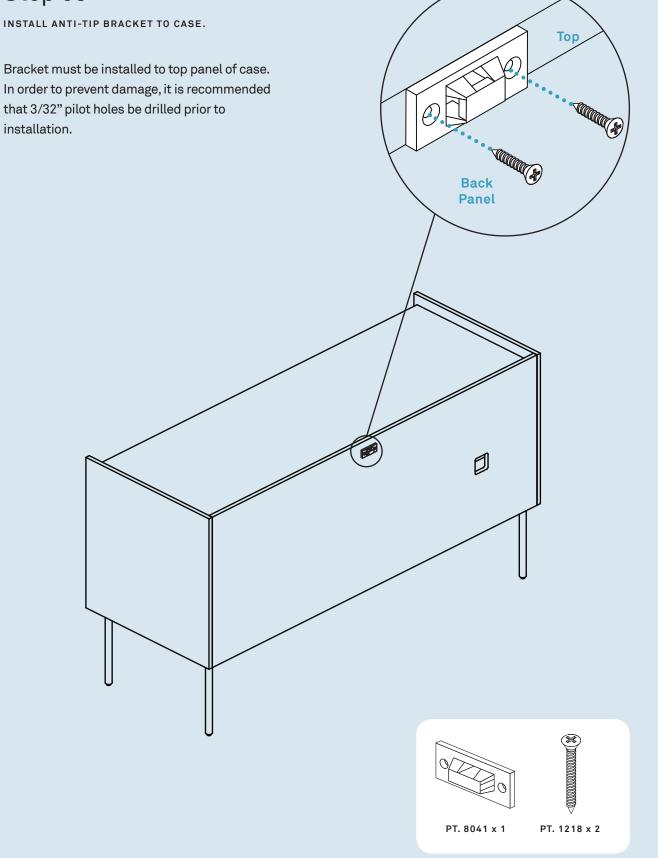




SECURE THE CASE.

Install and tighten the strap prior to using the product.

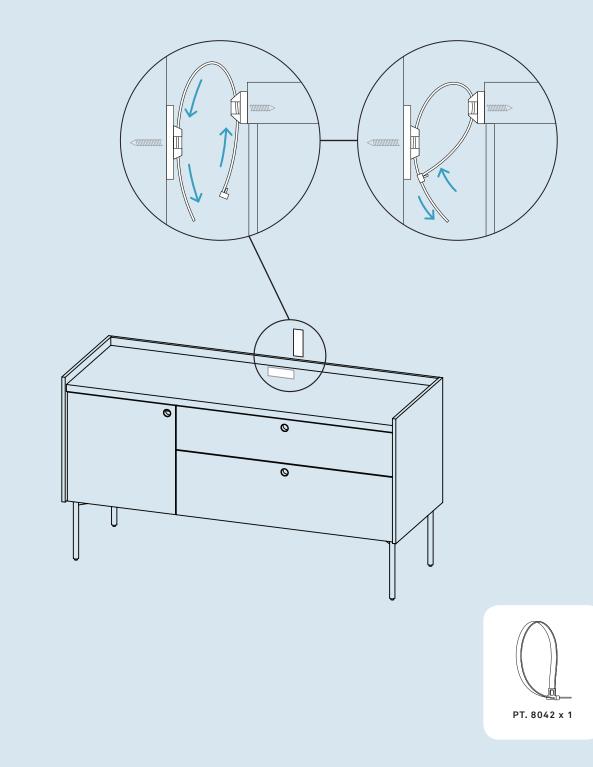


Additional Information

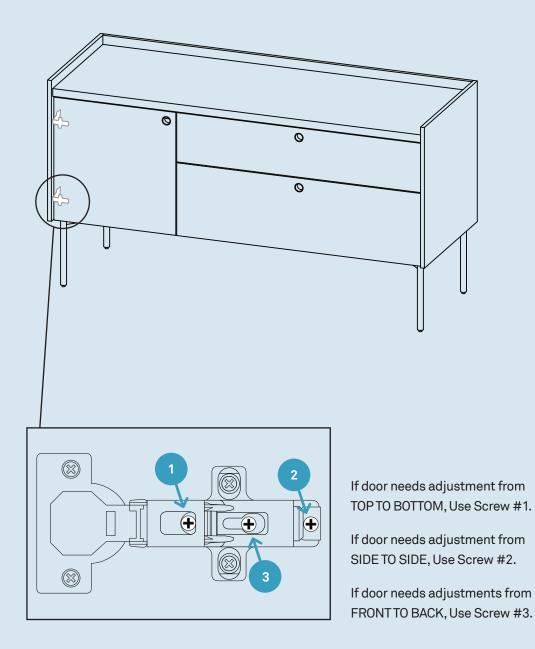

DOOR ADJUSTMENT.


Hinges work in pairs. If you adjust one hinge, chances are you will have to adjust all the hinges.

Additional Information

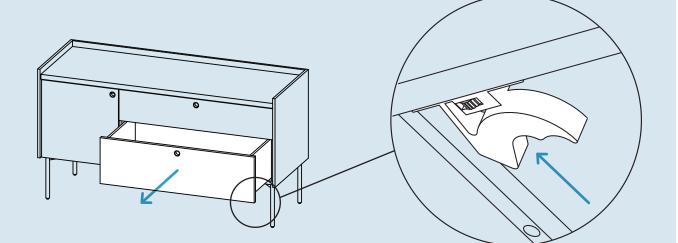

TO REMOVE DRAWERS

Extend the drawer completely. Squeeze both locks on the underside of the drawer while pulling the drawer out.

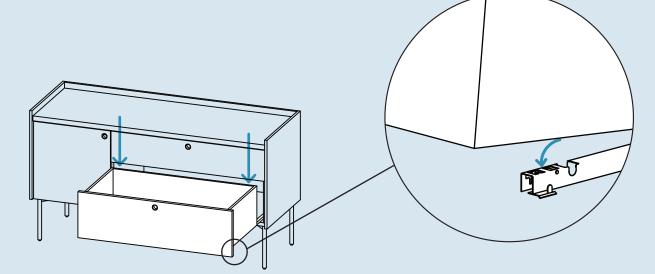

TO REINSTALL THE DRAWER

Pull both slides forward. Engage rear slide catches. Lower drawer front into place and push closed.

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulate for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

