



Skiff Large Cafe Table

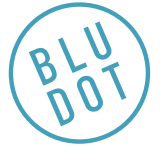

DESIGNED IN 2012

ASSEMBLY NOTES | REV 01




WHITE HEAT.

Crisp minimal white powder-coated aluminum and solid laminate top.
Clean lines designed to weather the elements.

NEED A HAND?

Contact us at service@bludot.com or
844.425.8368 for assistance.

Parts & Hardware




QTY 8

Pt. 1056




QTY 8

Pt. 1057

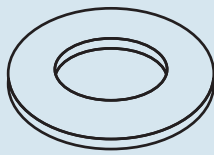


QTY 8

Pt. 3007

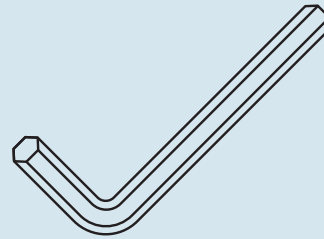


QTY 1

Pt. 9004

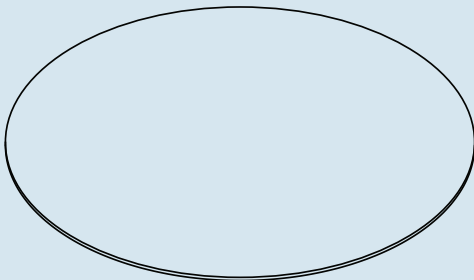


QTY 1

Top Panel

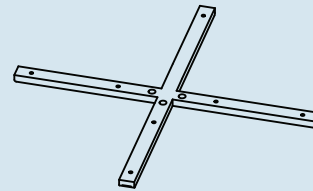


QTY 1

Metal Plate



QTY 1

Support Column

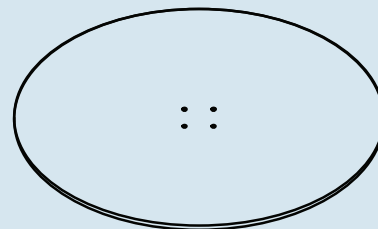



QTY 1

Base Plate

Step 01

ATTACH METAL PLATE.



Attach metal plate to support column as shown using the provided hardware.

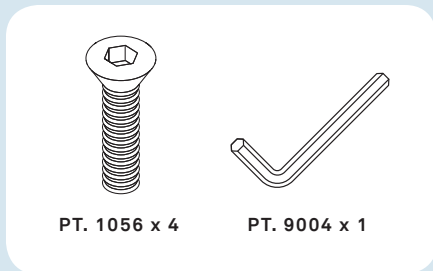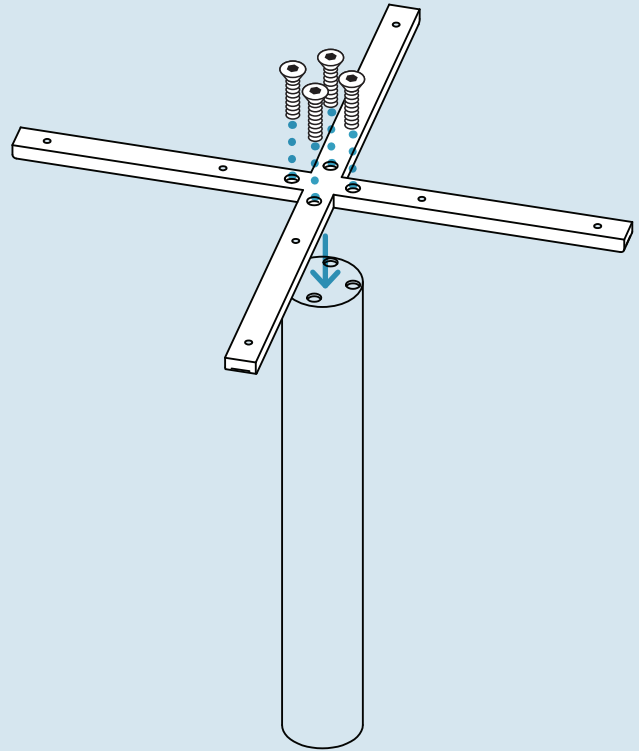

Step 02

ATTACH BASE PLATE.

Attach base plate to support column as shown using the provided hardware.

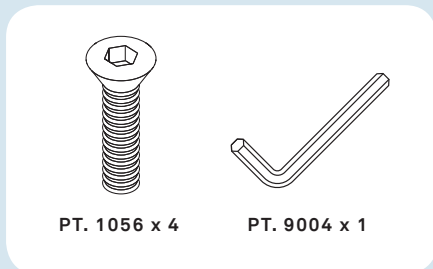
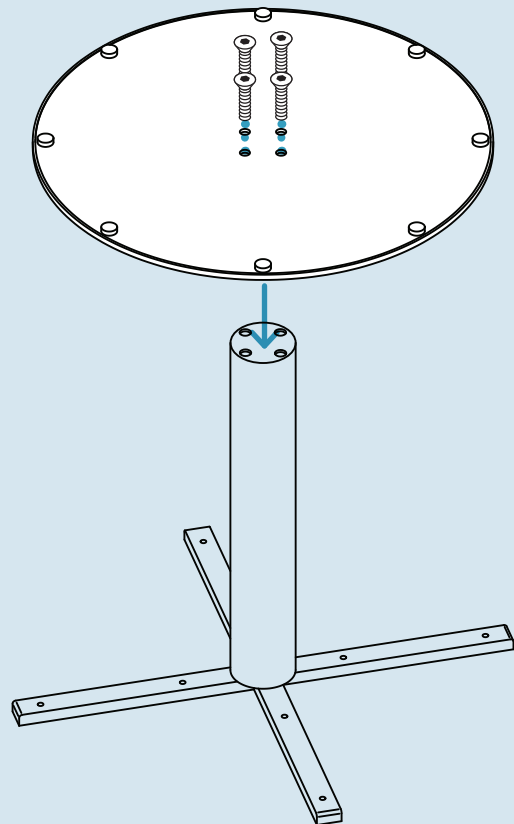


Step 03

ATTACH TOP PANEL.

Attach base assembly to table top as shown using the provided hardware.


NOTE: Place table top on carpet or similarly soft surface to protect from scratches during assembly.

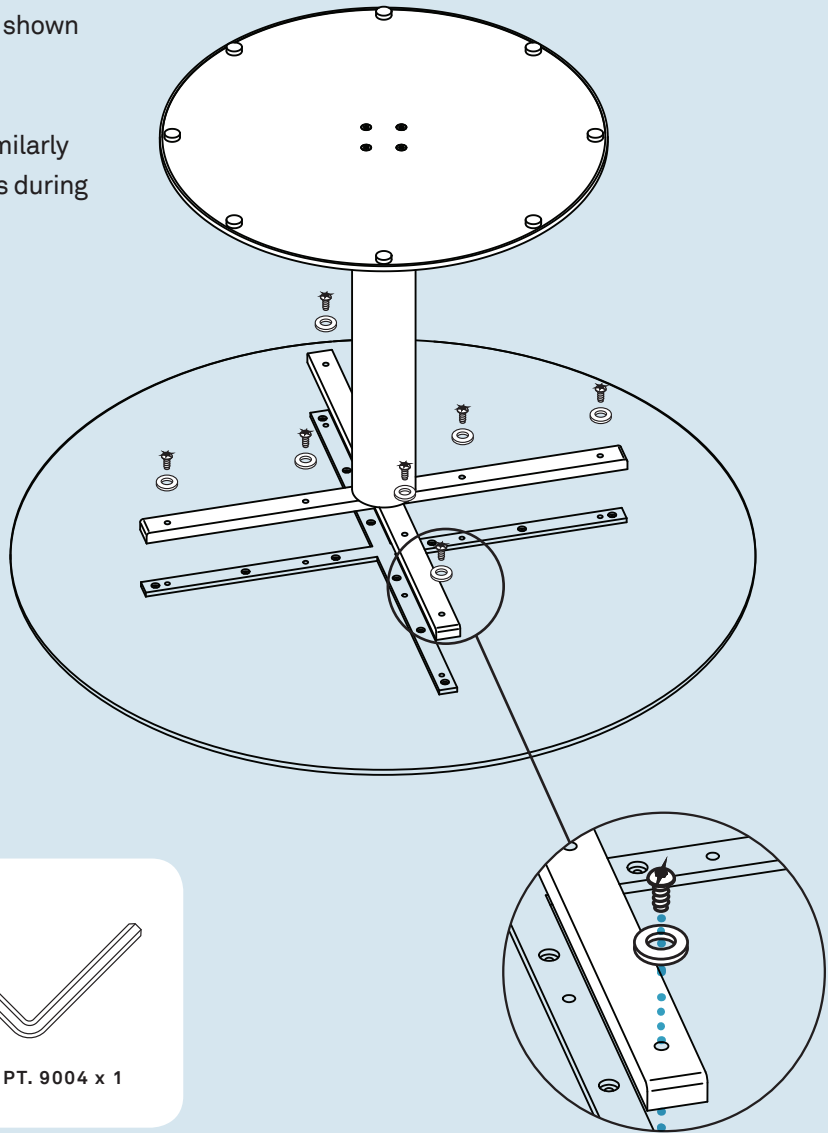

PT. 1057 x 8



PT. 3007 x 8

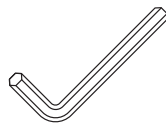

PT. 9004 x 1

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints use warm water and a mild detergent, such as dish soap. Wipe dry with a soft cloth.

PROTECT

Cover or store inside during the winter months.

