


DESIGNED IN 2013

ASSEMBLY NOTES | REV 00

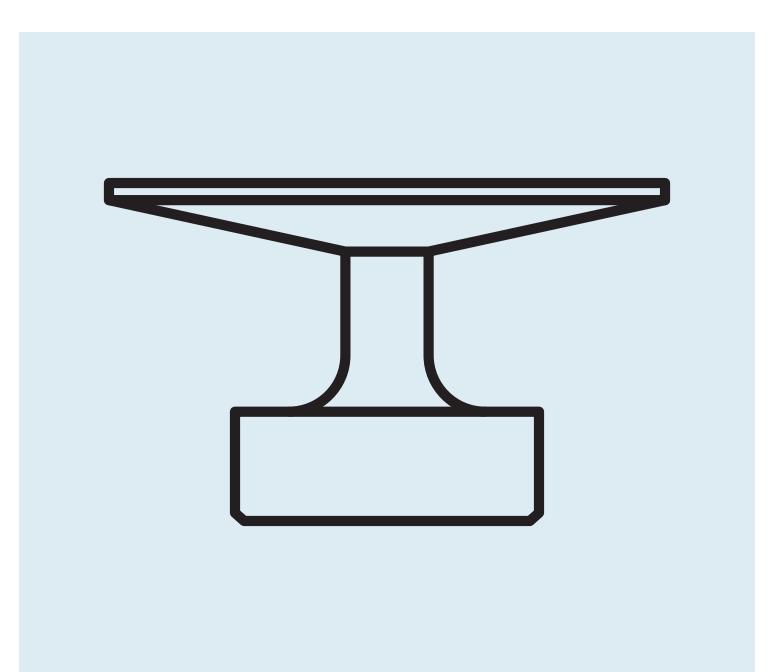




NEED A HAND?

Contact us at **service@bludot.com** or **844.425.8368** for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow along on Instagram for some sneak peeks into the process.


## Parts & Hardware

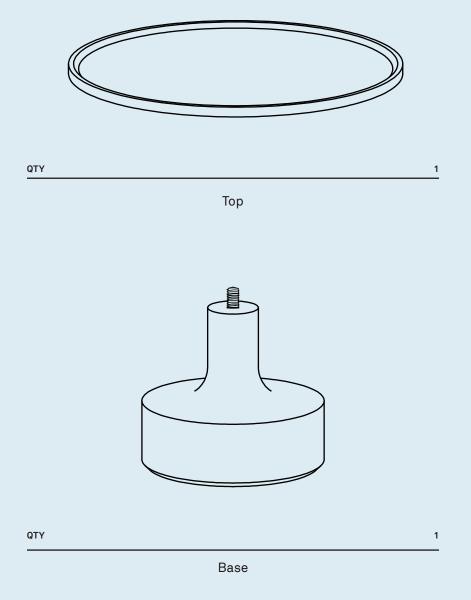

## Step 01

АТТАСН ТОР

Attach top by aligning base bolt with corresponding threaded hole on the underside of top. Tighten clockwise.

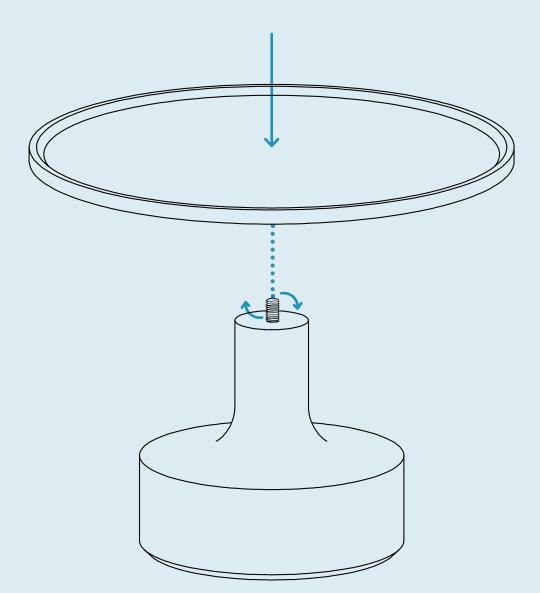

## Additional Information

## CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

