
Modu-licious Collection

DESIGNED IN 1999

ASSEMBLY NOTES | REV 02



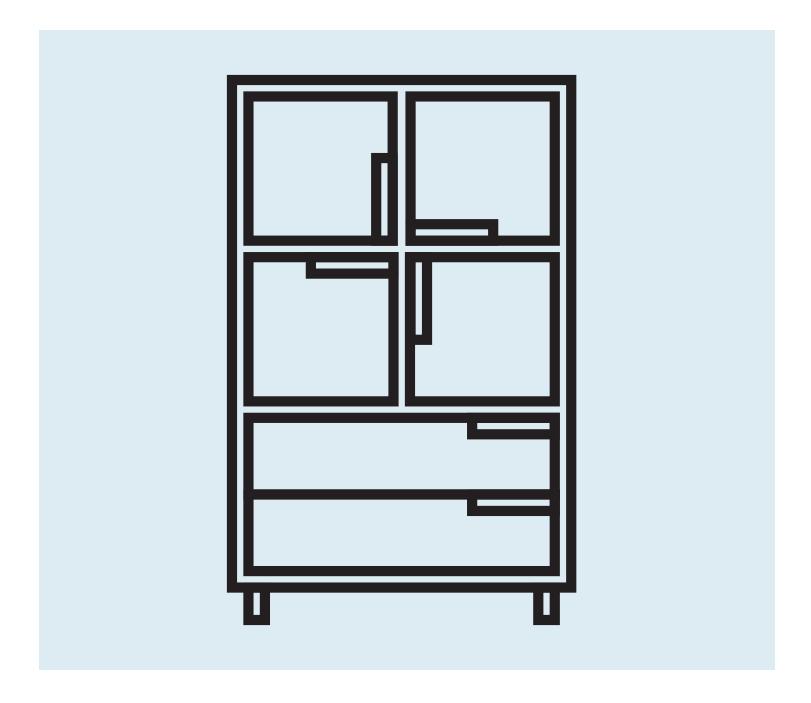


NEED A HAND?

Contact us at **service@bludot.com** or **844.425.8368** for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow along on Instagram for some sneak peeks into the process.


Parts & Hardware

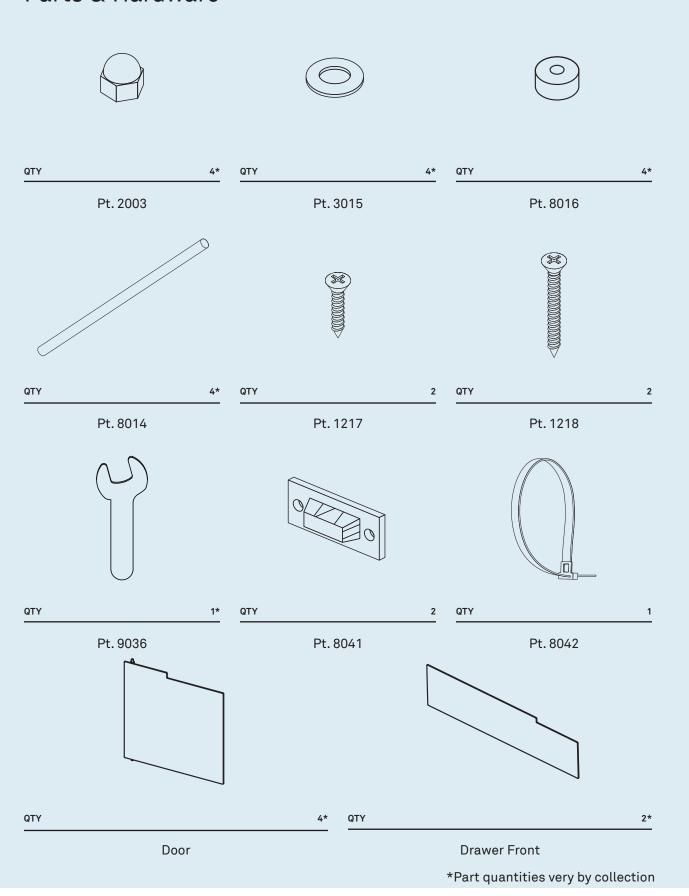


ATTACHING THE DRAWER FRONTS.

Attach each drawer front by opening the drawer and slotting the two studs into the front of the drawer.

Secure the drawer with the provided hardware as shown.

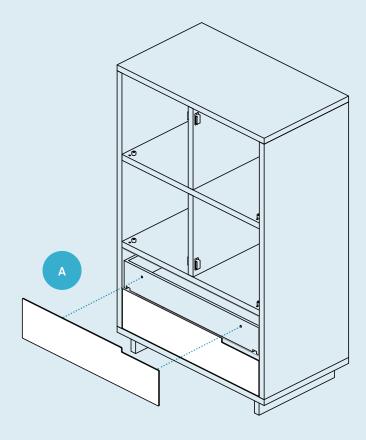

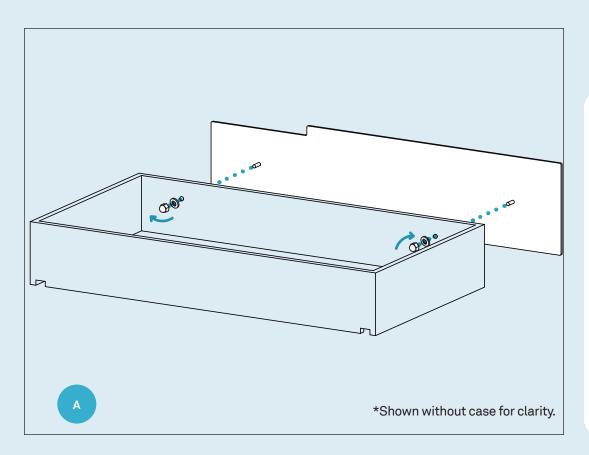






INSTALL DOORS.

To install the doors, start by sliding the metal rod through the brackets on the back of each door.


Next, install the doors as shown below.

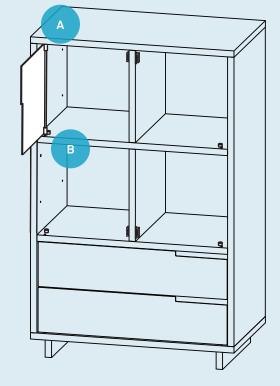

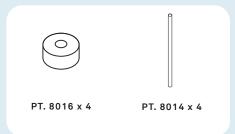

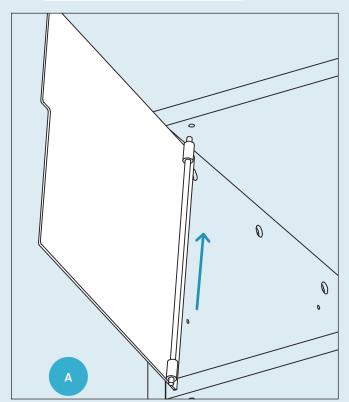


Angle door and push rod into the pre-drilled hole on the underside of the top panel.

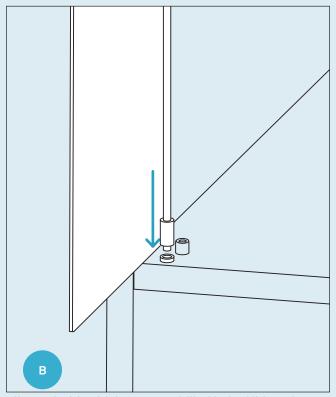



Align rod with with lower pre-drilled hole. Slide rod through plastic washer and into pre-drilled hole.

ATTACH ANTI-TIP BRACKET TO WALL.


Install anti-tip bracket to wall stud 1-inch below case top panel height.

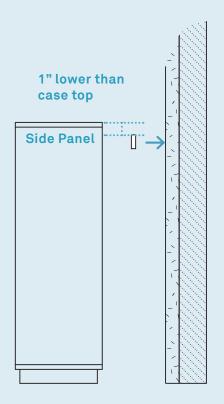

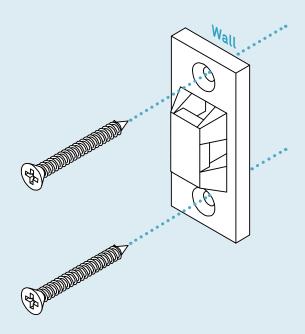

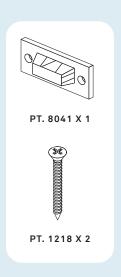


INSTALL ANTI-TIP BRACKET TO CASE.

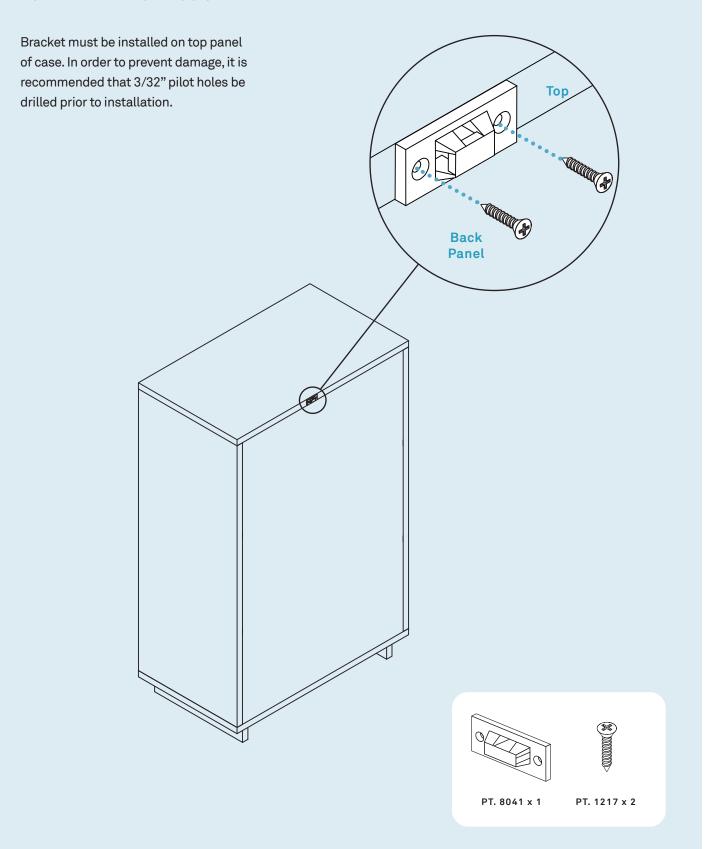


SECURE THE CASE.

Install and tighten the strap prior to using the product.

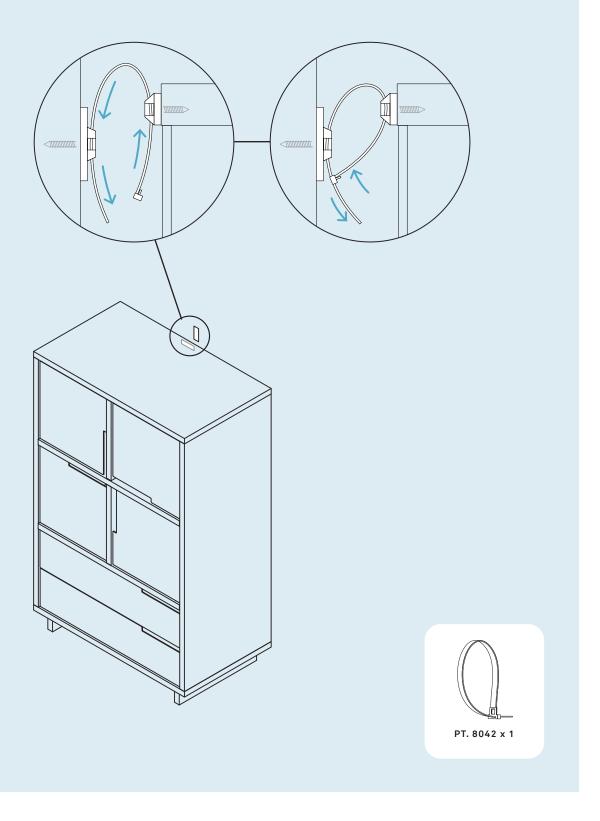


Additional Information

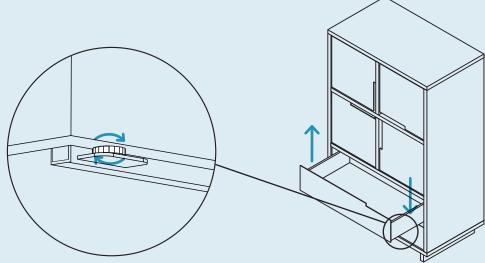

TO ADJUST DRAWER POSITION

Lift the drawer up slightly and twist the levelers to the desired position.

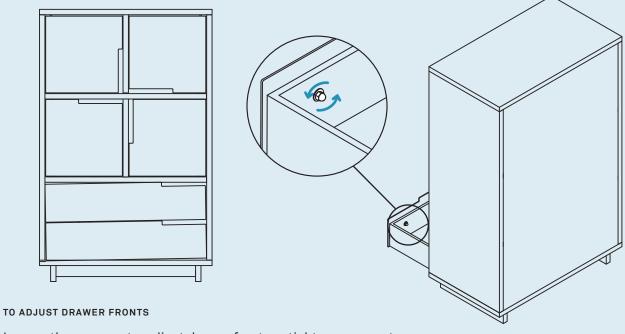


Loosen the acorn nuts, adjust drawer front, re-tighten acorn nuts.

Drawer Removal

REMOVE DRAWERS.

Extend the drawer completely and lift upwards to remove drawers as shown.

To reinstall, lower drawer front into place and push closed.

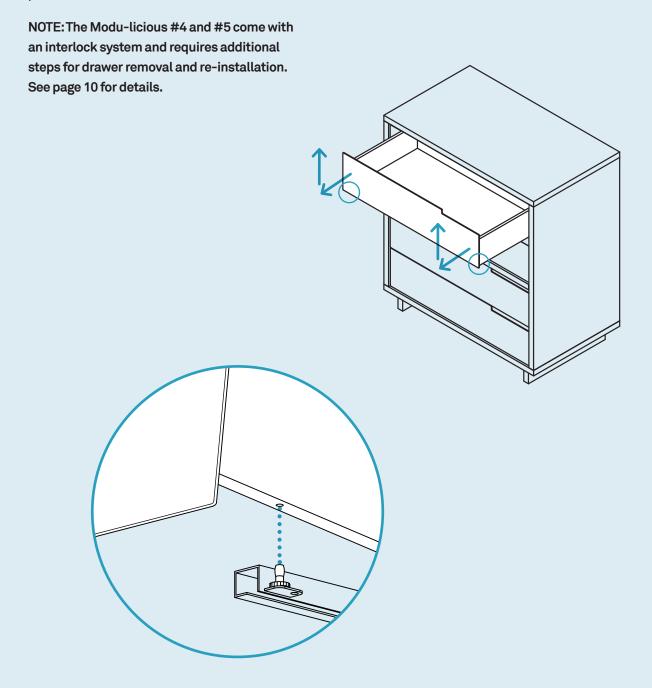



Interlock System

INSTRUCTIONS FOR MODU-LICIOUS #4 AND #5.

Any single drawer can be easily removed. The interlock will re-engage when the drawer is reinserted and closed. If multiple drawers needs to be removed, the following procedure must be used:

- 1. Remove the 1st drawer.
- 2. Reach inside the back of the case and move the actuator to the 'CLOSED' position.
- 3. This will allow a 2nd drawer to be removed.
- 4. To remove a 3rd drawer, move the actuator to the 'CLOSED' position for the 2nd drawer.
- 5. Continue until all the drawers are removed.

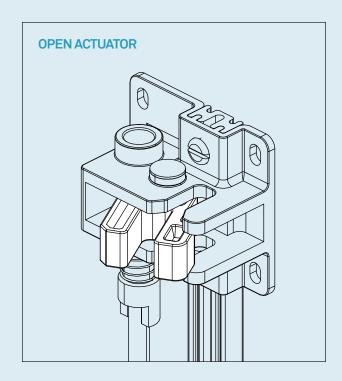

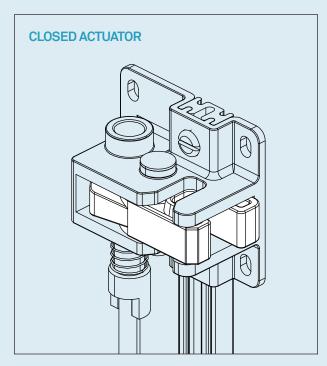

Interlock System


INSTRUCTIONS FOR MODU-LICIOUS #4 AND #5.


To install the drawers, the rear actuators must be moved to the 'OPEN' position for each drawer being installed. Only 1 actuator can be moved at a time.

CAUTION: Do not install and slam any drawer shut with the actuator in the 'CLOSED' position. This may damage the actuator or bend the latch which could cause the system to malfunction.

To reinstall the drawers, the following procedure must be used:

- To install the 1st drawer, reach inside the back of the case and move the corresponding actuator to the 'OPEN' position.
- 2. Insert the drawer and slowly close until the interlock engages.
- 3. To install the 2nd drawer, reach inside to the back of the case and move this actuator to the 'OPEN' position.
- 4. Continue the installation with each successive drawer.

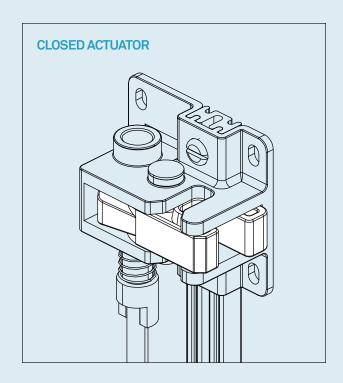

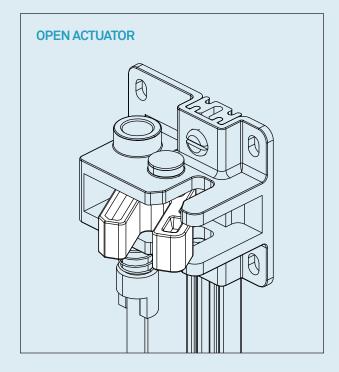



Warning applicable to Modu-licious #4 and Modu-licious #5

Additional Information

CAUTION

Do not store clothing in this product unless it specifically indicated for that purpose. The items within this collection intended for clothing storage include the: Modu-licious #4 and Modu-licious #5

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

